



DOOR  
STATION


## MODEL:

280SD-C12

280SD-R2

280SD-R5

280SD-R5-A

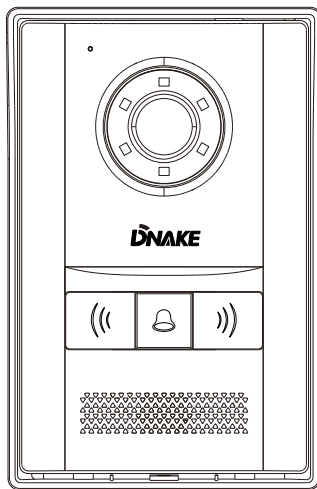

QUICK START GUIDE

# REMARK

---

Please follow the user manual for correct installation and testing. If there is any doubt please call our tech-supporting and customer center.

Our company applies ourselves to reformation and innovation of our products. No extra notice for any change. The illustration shown here is only for reference. If there is any difference, please take the actual product as the standard.

The product and batteries must be handled separately from household waste. When the product reaches the end of service life and needs to be discarded, please contact the local administrative department and put it in the designated collection points in order to avoid the damage to the environment and human health caused by any disposal. We encourage recycling and reusing the material resources.

# CATALOG

Package Contents .....	1
Pictures.....	3
Basic Operation .....	4
System Configuration .....	5
System Diagram.....	6
Installation .....	9
Safety Instructions .....	14

**For specific operation instructions, please scan the following QR code to obtain the full version of the User Manual.**



# PACKAGE CONTENTS

Please make sure the package contains the following items:

MODEL: 280SD-R2



Door Station



 
Expansion tube



Screw



Screw Wrench



Quick Start Guide

 
MODEL: 280SD-R5



Door Station



Expansion Tube




Screw



Quick Start Guide

 
MODEL: 280SD-R5-A



Door Station



 Expansion Tube




Screw



Quick Start Guide

## MODEL: 280SD-C12(Surface Mounting)

 

Door Station



Screw



Quick Start Guide

## MODEL: 280SD-C12(Flush Mounting)



Door Station



Screw




Screw Wrench




Quick Start Guide

# PICTURES


## MODEL: 280SD-R2

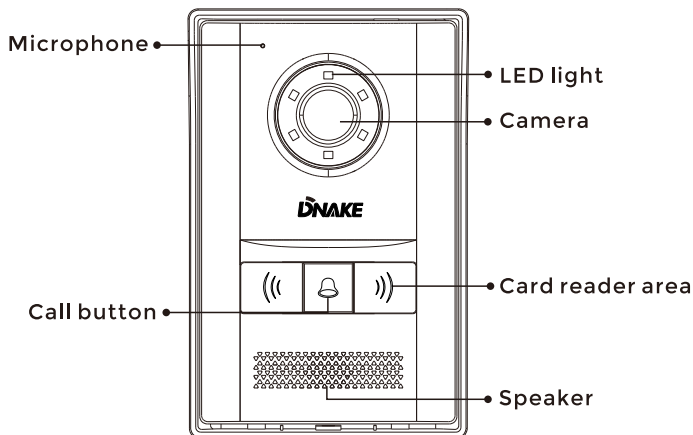


MODEL: 280SD-R5

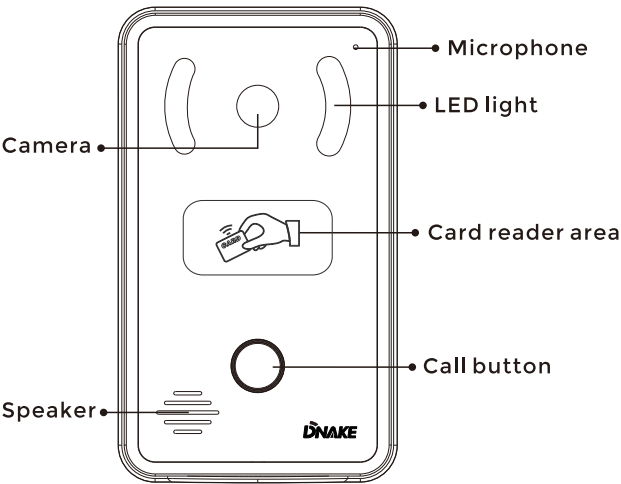

MODEL: 280SD-R5-A

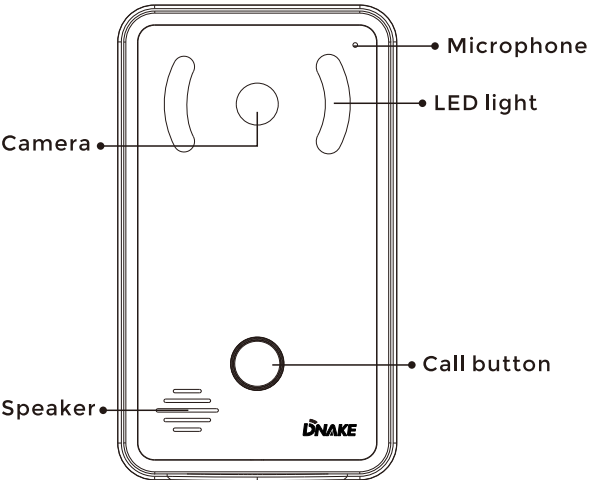

MODEL: 280SD-C12

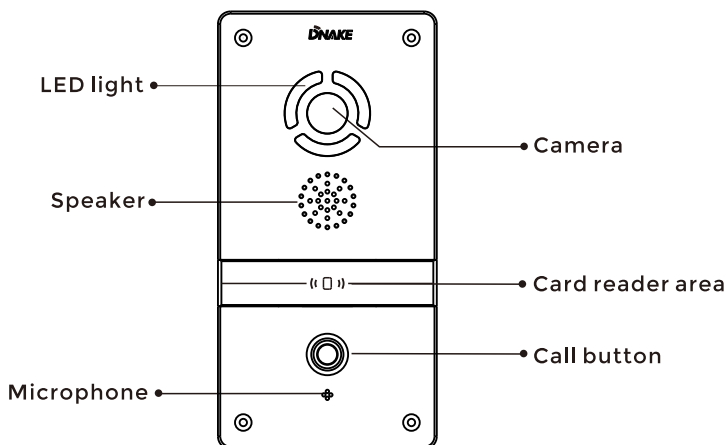

## BASIC OPERATION


### 1. Call indoor monitor

In standby mode, press the call button on door station to call indoor monitor. During the call, press the call button on door station again to end the call. If the call fails or indoor monitor is busy, door station will emit a beep.

### 2. Unlocking by card


Put the registered IC card on card reader area of the door station. If IC card has been authorized, after unlocking the door by card, the system will issue a voice message that "the door has been opened", otherwise it will emit a beep.

# SYSTEM CONFIGURATION

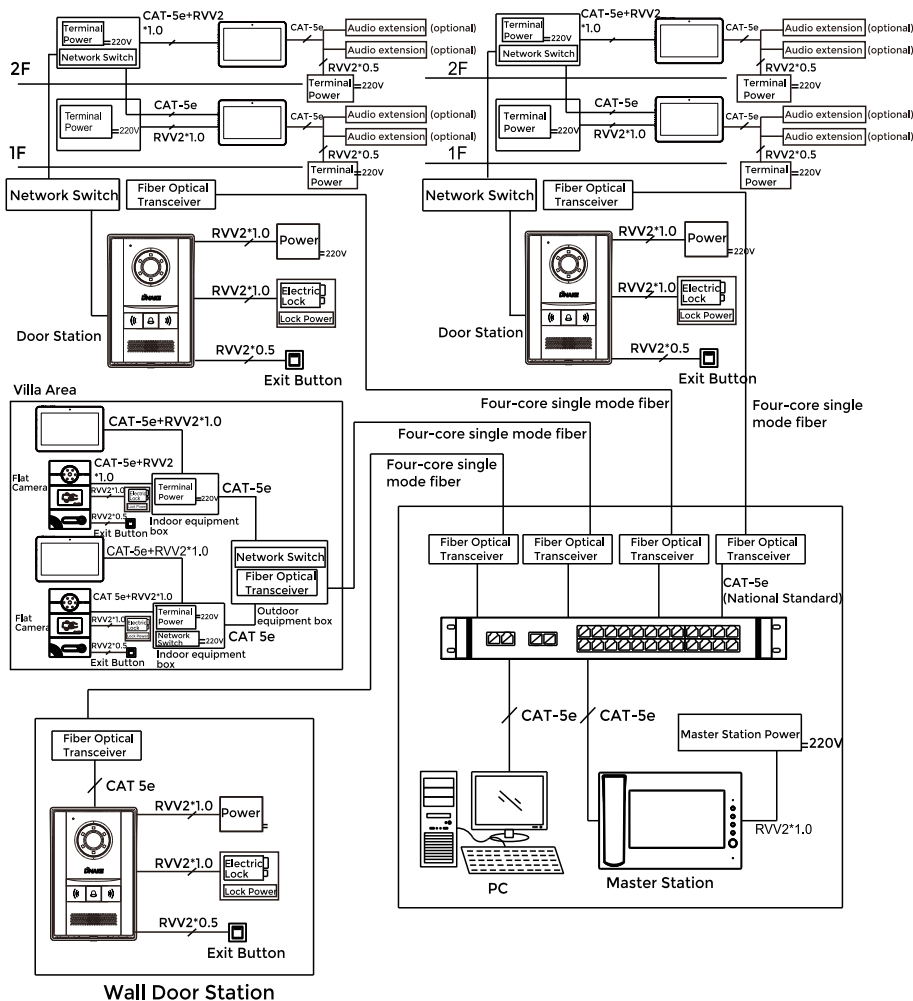




# SYSTEM DIAGRAM

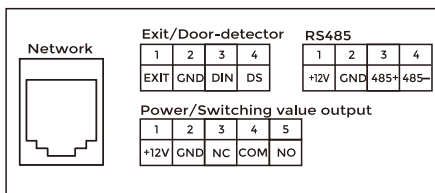

280SD-R2/280SD-R5/280SD-R5-A

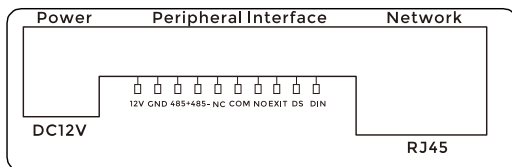


280SD-C12

## 1. RS485


It can connect to the equipment with RS485 interface.

RS485 interface can output 12V/100mA power. Connection of +12V isn't require if it is unused.

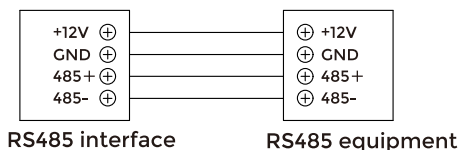


## 2. Exit/Door-detector

Connect with Exit button and door-detector switch; DIN is reserved terminal, please don't connect it.

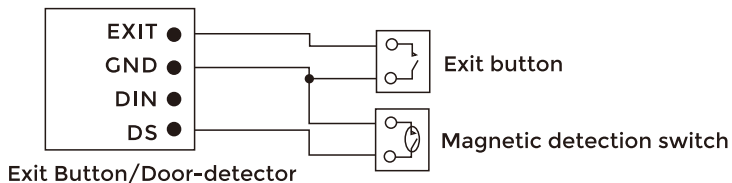


## 3. Network

Connect to management center, indoor monitor or other network device through.

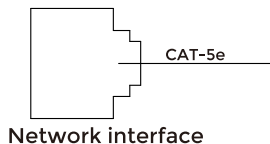


## 4. Power/Switching value output

Connect power interface of door station to 12V DC power. Switching value output connects with electric lock. Independent power supply is required for the lock.

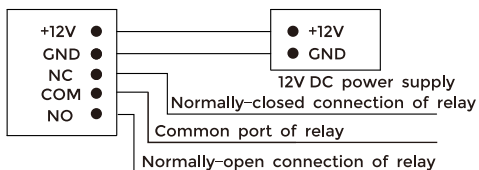


## 5. RS485/Switching Value Output/Exit/Door-detector

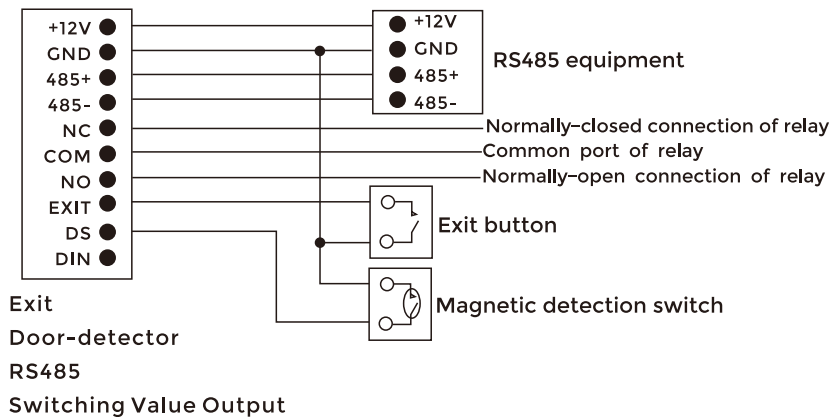


# INSTALLATION

MODEL: 280SD-R2

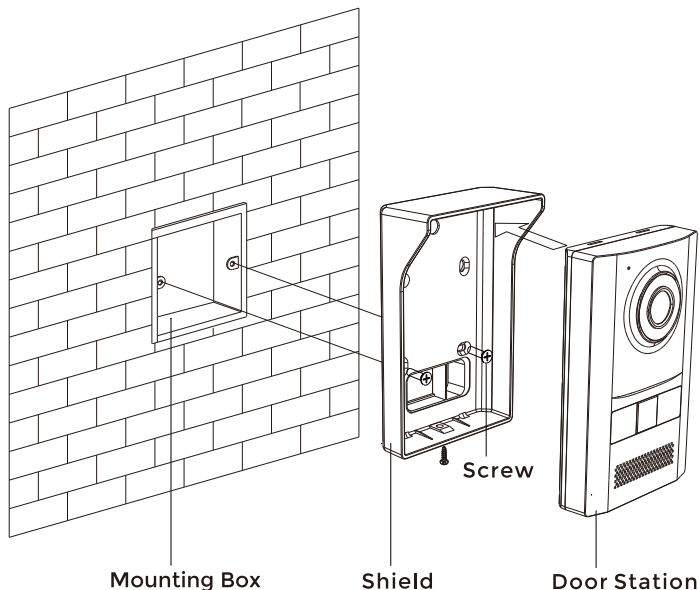


Product size: 170.5x111x38.6mm

## Installation Instructions:

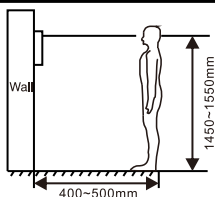


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

MODEL: 280SD-R5/280SD-R5-A

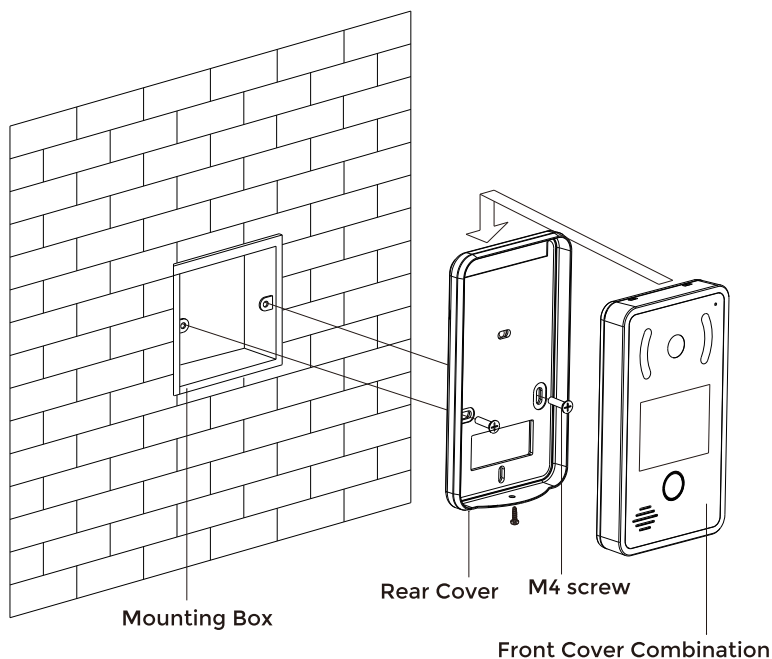


Product size: 153x90x24mm

### Installation Instructions:

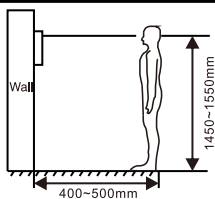


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

MODEL: 280SD-R5/280SD-R5-A

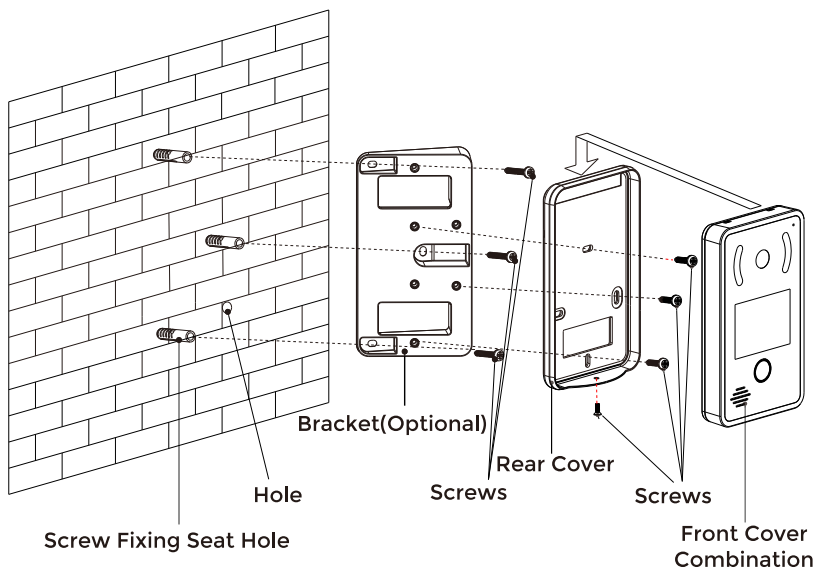


Product size: 153x90x24mm

### Installation Instructions:

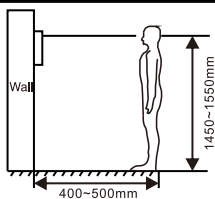


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

**MODEL: 280SD-C12(Surface Mounting)**

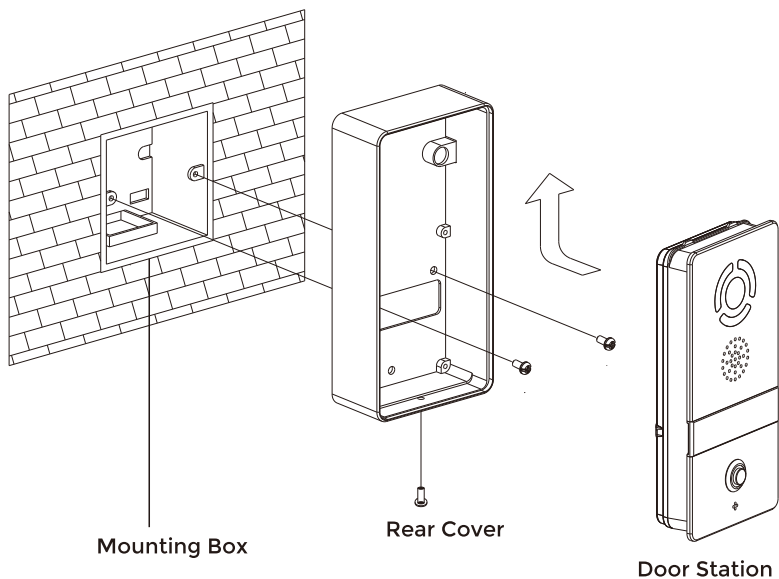


Product size: 170x84.5x31mm

**Installation Instructions:**

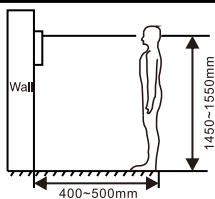

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

## MODEL: 280SD-C12(Flush Mounting)

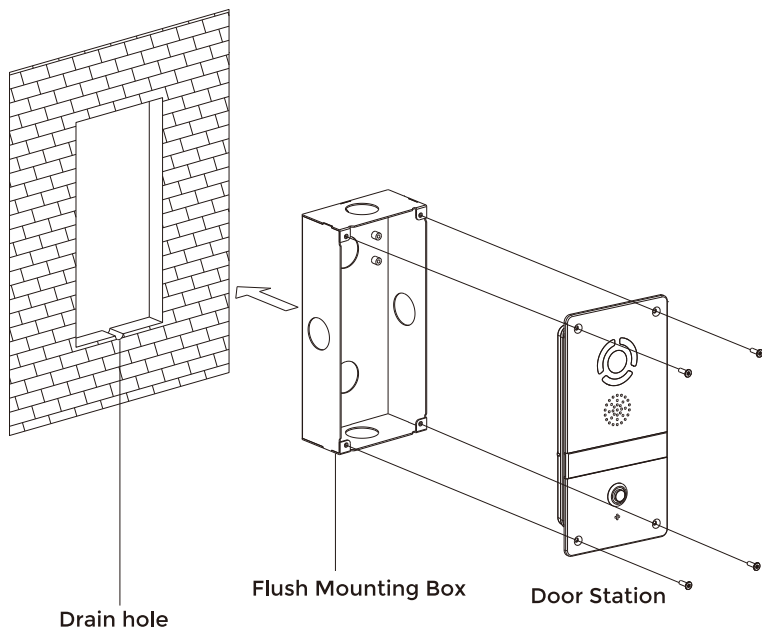


Product size: 190x95x27mm

Flush mounting box size: 180X85X45mm

Trepanning size: 185x90x52mm

### Installation Instructions:

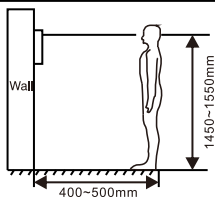

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.



# SAFETY INSTRUCTIONS

In order to protect you and others from harm or your device from damage, please read the following information before using the device.

Do not install the device in the following places:

- Do not install the device in high-temperature and moist environment or the area close to magnetic field, such as the electric generator, transformer or magnet.
- Do not place the device near the heating products such as electric heater or the fluid container.
- Do not place the device in the sun or near the heat source, which might cause discoloration or deformation of the device.
- Do not install the device in an unstable position to avoid the property losses or personal injury caused by the falling of device.

Guard against electric shock, fire and explosion:

- Do not use damaged power cord, plug or loose outlet.
- Do not touch the power cord with wet hand or unplug the power cord by pulling.
- Do not bend or damage the power cord.
- Do not touch the device with wet hand.
- Do not make the power supply slip or cause the impact.
- Do not use the power supply without the manufacturer's approval.
- Do not have the liquids such as water go into the device.

Clean Device Surface

- Clean the device surfaces with soft cloth dipped in some water, and then rub the surface with dry cloth.

Other Tips

- In order to prevent damage to the paint layer or the case, please do not expose the device to chemical products, such as the diluent, gasoline, alcohol, insect-resist agents, opacifying agent and insecticide.
- Do not knock on the device with hard objects.
- Do not press the screen surface. Overexertion might cause flopover or damage to the device.
- Please be careful when standing up from the area under the device.
- Do not disassemble, repair or modify the device at your own discretion.
- The arbitrary modification is not covered under warranty. When any repair required, please contact the customer service center.
- If there is abnormal sound, smell or fume in the device, please unplug the power cord immediately and contact the customer service center.
- When the device isn't used for a long time, the adaptor and memory card can be removed and placed in dry environment.
- When moving, please hand over the manual to new tenant for proper usage of the device.



# EASY & SMART INTERCOM SOLUTIONS