




INDOOR
MONITOR

MODEL:

S212
S213M
S213K

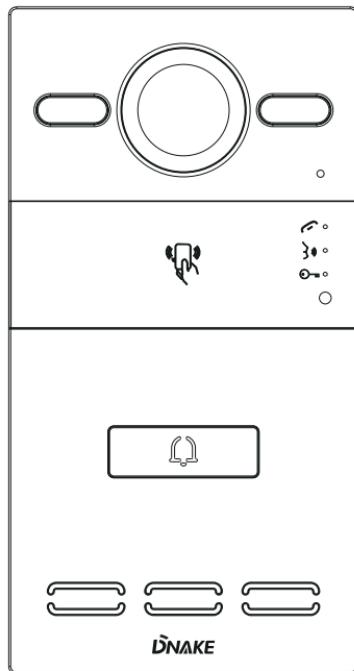

QUICK START GUIDE

REMARK

Please follow the user manual for correct installation and testing. If there is any doubt please call our tech-supporting and customer center.

Our company applies ourselves to reformation and innovation of our products. No extra notice for any change.

The illustration shown here is only for reference. If there is any difference, please take the actual product as the standard. The product and batteries must be handled separately from household waste. When the product reaches the end of service life and needs to be discarded, please contact the local administrative department and put it in the designated collection points in order to avoid the damage to the environment and human health caused by any disposal. We encourage recycling and reusing the material resources.

CATALOG

Package Contents	1
Pictures.....	9
Basic Operation	12
System Diagram	13
Device Wiring	14
Installation.....	16
Safety Instructions.....	31
FCC Warning.....	32


For specific operation instructions, please scan the QR code to obtain the full version of the User Manual.



PACKAGE CONTENTS

Please make sure the package contains the following items:


MODEL: S212 (Surface Mounting-1)

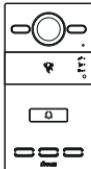

Door Station



Rain Hood RH10
(Optional)

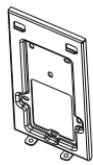

Rear Cover




Screw



Wiring Cover



Sealing Plug of
Wiring Port

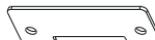

Junction Pressing Plate



Quick Start Guide




Wrench




Screw Fixing Seat


MODEL: S212 (Surface Mounting-2)

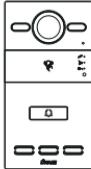

Door Station

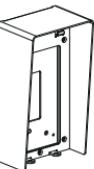

Rain Hood RH11
(Optional)

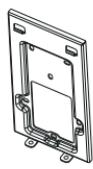

Rear Cover



Screw




Wiring Cover



Sealing Plug of
Wiring Port



Junction Pressing Plate

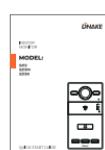

Quick Start Guide




Wrench




Screw Fixing Seat

MODEL: S212 (Surface Mounting-3)

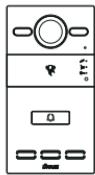

Door Station

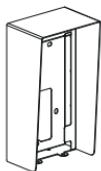

Rain Hood RH12
(Optional)



Rear Cover



Screw



Wiring Cover



Sealing Plug of
Wiring Port



Junction Pressing Plate



Quick Start Guide




Wrench



Screw Fixing Seat

MODEL: S212 (Surface Mounting-4)

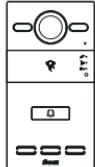

Door Station



Rain Hood RH01
(Optional)



Rear Cover



Screw



Wiring Cover



Sealing Plug of
Wiring Port



Junction Pressing Plate



Quick Start Guide




Wrench




Screw Fixing Seat


MODEL: S212(Flush Mounting)

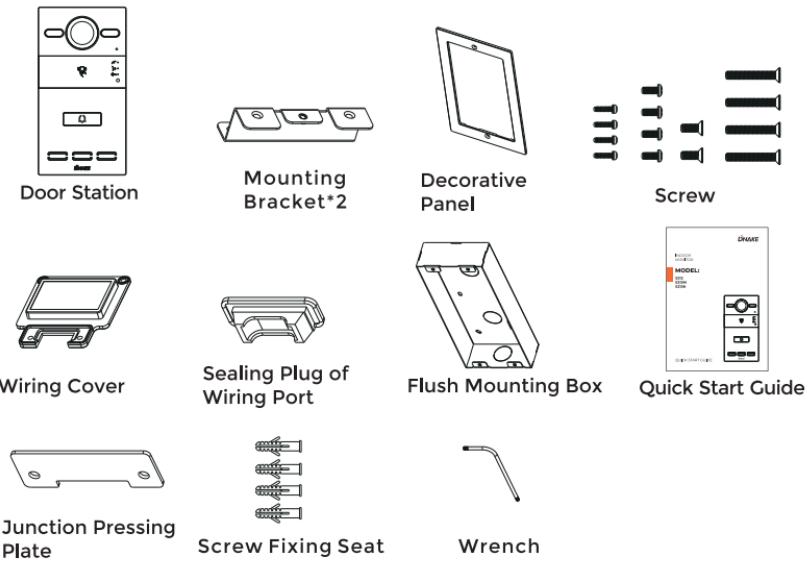

MODEL: S213M (Surface Mounting-1)

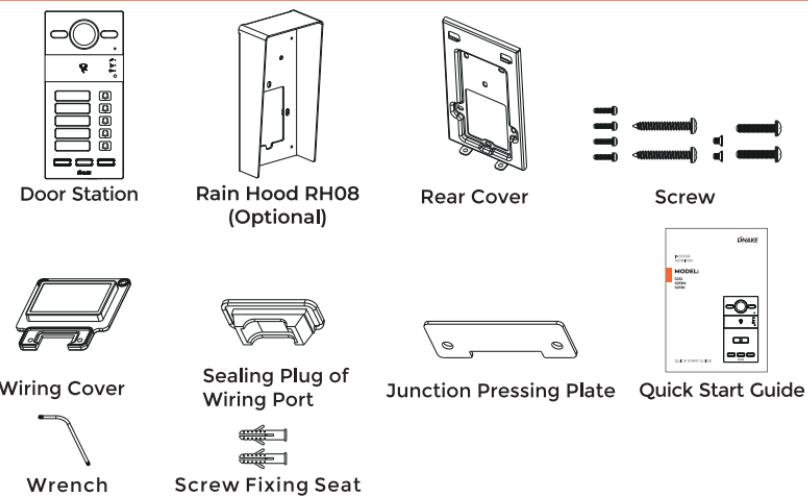

MODEL: S213M (Surface Mounting-2)

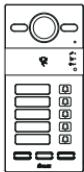

Door Station



Rain Hood RH09
(Optional)




Rear Cover



Screw



Wiring Cover

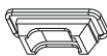

Sealing Plug of
Wiring Port



Junction Pressing Plate



Quick Start Guide




Wrench




Screw Fixing Seat

MODEL: S213M (Surface Mounting-3)

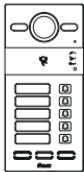

Door Station

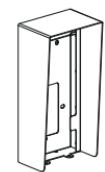

Rain Hood RH13
(Optional)



Rear Cover



Screw



Wiring Cover



Sealing Plug of
Wiring Port



Junction Pressing Plate



Quick Start Guide




Wrench




Screw Fixing Seat

MODEL: S213M (Surface Mounting-4)

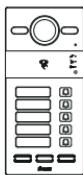

Door Station

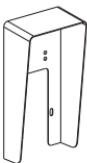

Rain Hood RH01
(Optional)



Rear Cover



Screw



Wiring Cover



Sealing Plug of
Wiring Port



Junction Pressing Plate



Quick Start Guide




Wrench



Screw Fixing Seat

MODEL: S213M(Flush Mounting)

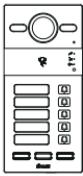

Door Station



Mounting
Bracket*2



Decorative
Panel




Screw




Wiring Cover



Sealing Plug of
Wiring Port

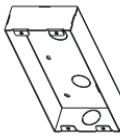

Flush Mounting Box

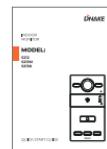

Quick Start Guide



Junction Pressing
Plate



Screw Fixing Seat



Wrench

MODEL: S213K (Surface Mounting-1)



Door Station



Rain Hood RH08
(Optional)




Rear Cover



Screw




Wiring Cover

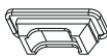

Sealing Plug of
Wiring Port



Junction Pressing Plate

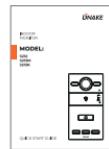

Quick Start Guide



Wrench




Screw Fixing Seat

MODEL: S213K (Surface Mounting-2)



Door Station

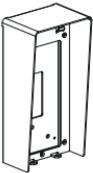

Rain Hood RH09
(Optional)



Rear Cover




Screw



Wiring Cover



Sealing Plug of
Wiring Port

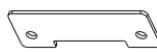

Junction Pressing Plate



Quick Start Guide



Wrench




Screw Fixing Seat

MODEL: S213K (Surface Mounting-3)



Door Station

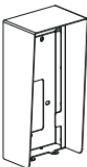

Rain Hood RH13
(Optional)



Rear Cover



Screw



Wiring Cover



Sealing Plug of
Wiring Port



Junction Pressing Plate



Quick Start Guide



Wrench




Screw Fixing Seat

MODEL: S213K (Surface Mounting-4)



Door Station

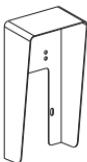

Rain Hood RH01
(Optional)



Rear Cover



Screw




Wiring Cover



Sealing Plug of
Wiring Port



Junction Pressing Plate

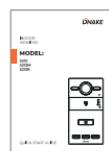

Quick Start Guide



Wrench



Screw Fixing Seat

MODEL: S213K (Flush Mounting)



Door Station



Mounting Bracket*2



Decorative Panel




Screw




Wiring Cover



Sealing Plug of
Wiring Port

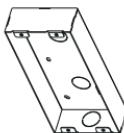

Flush Mounting Box

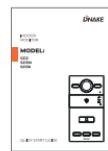

Quick Start Guide



Junction Pressing
Plate




Screw Fixing Seat



Wrench

PICTURES

MODEL: S212

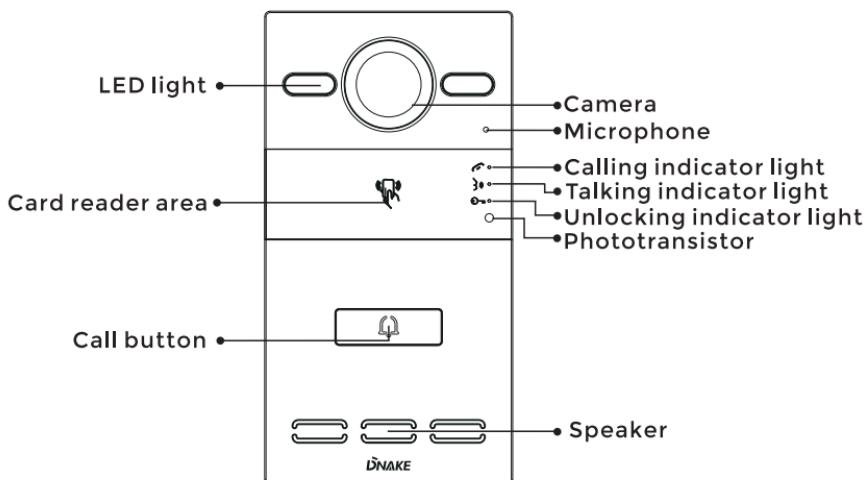


Note:

Calling indicator light: The 1st indicator light will be turned on if the calling button is pressed.

Talking indicator light: The 2nd indicator light will be turned on if the call is picked up or Door Station is monitored.

Unlocking indicator light: The 3rd indicator light will be turned on for 3s when the door is opened.

Relay Outputs: Support 2 relay outputs.

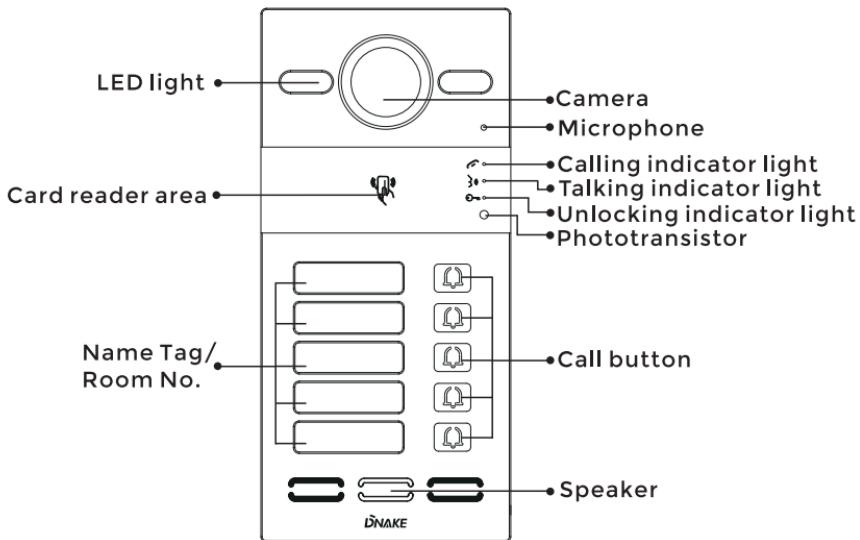


Note:

Calling indicator light: The 1st indicator light will be turned on if the calling button is pressed.

Talking indicator light: The 2nd indicator light will be turned on if the call is picked up or Door Station is monitored.

Unlocking indicator light: The 3rd indicator light will be turned on for 3s when the door is opened.

Relay Outputs: Support 2 relay outputs.

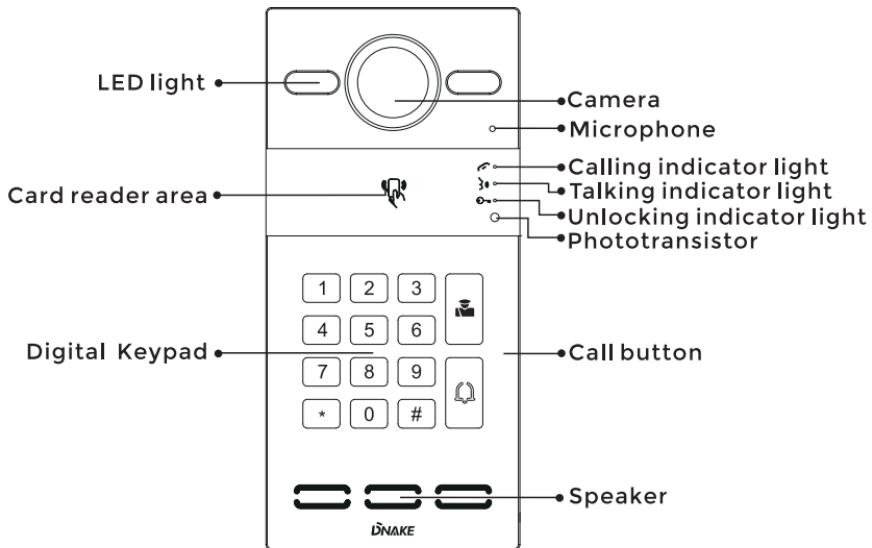

Note:

Calling indicator light: The 1st indicator light will be turned on if the calling button is pressed.

Talking indicator light: The 2nd indicator light will be turned on if the call is picked up or Door Station is monitored.

Unlocking indicator light: The 3rd indicator light will be turned on for 3s when the door is opened.

Relay Outputs: Support 2 relay outputs.

Basic Operation


1. Call indoor monitor

In standby mode, press the call button on door station to call indoor monitor. During the call, press the call button on door station again to end the call. If the call fails or indoor monitor is busy, door station will emit a beep.


2. Unlocking by card

Put the registered IC/ID card on card reader area of the door station. If IC/ID card has been authorized, after unlocking the door by card, the system will issue a ringtone and indicator light is on for 3 seconds, otherwise it will emit a beep.

SYSTEM DIAGRAM

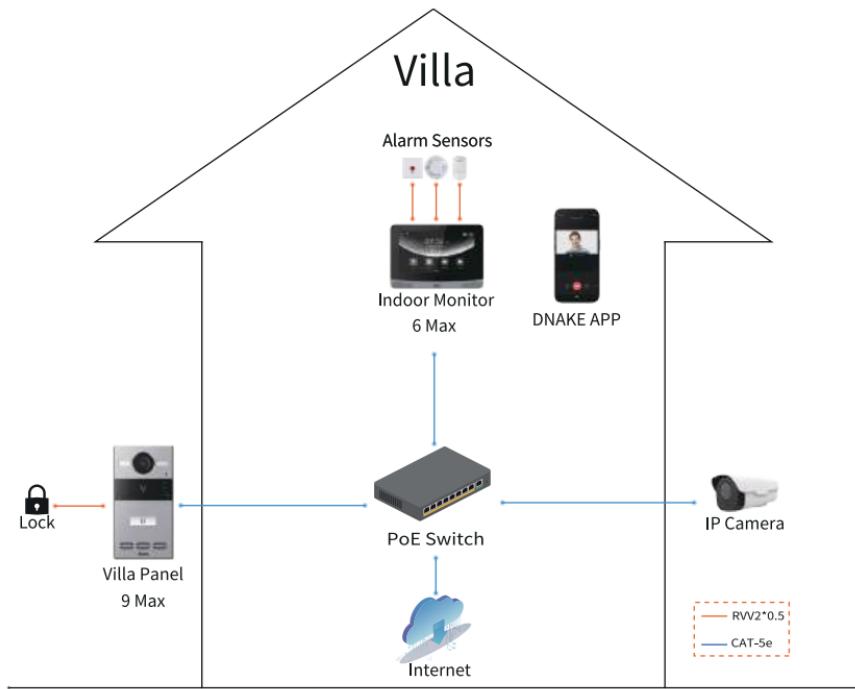


DEVICE WIRING

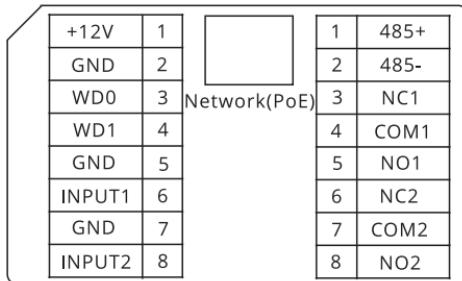

1. Network(PoE)


Standard RJ45 interface is for the connection with PoE switch or other network switch.

PSE shall comply with IEEE 802.3af (PoE) and its output power not less than 15.4W and its output voltage not be less than 50V.

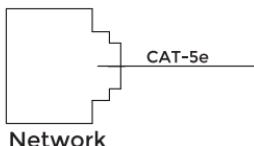


2. Power

Power interface of door station connects with 12V DC power.

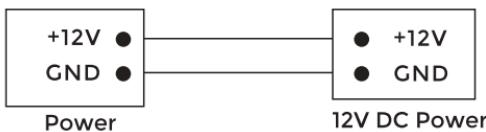


3. Exit/Door-detector/Fire Fighting Linkage

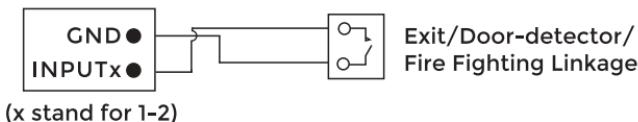

4. RS485/Switching Value Output

Enable to connect equipment with RS485 interface.

Connect to the lock module(independent power supply is necessary for the lock).

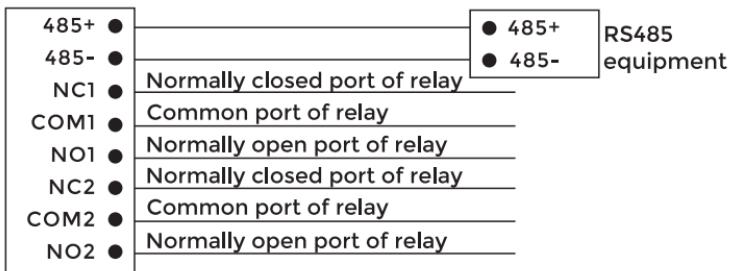


RS485/Switching Value Output

Warning

1. When connecting to an inductive load device such as a relay or electromagnetic lock, you are recommended to use a diode 1A/400V(included in the accessories) in anti-parallel with the load device to absorb inductive load voltage peaks. Intercom will be better protected in this way.


2. The load current of the relay cannot be greater than 2A.

See attached picture for more details.

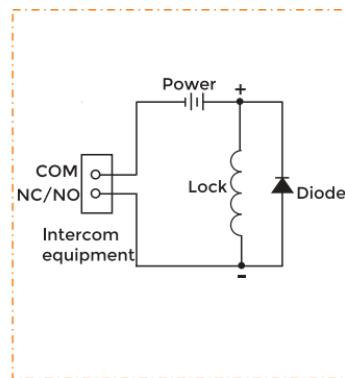

5. Card Reader Interface

The interface can be connected to one IC/ID card reader or be used for reading the information of built-in card reader.

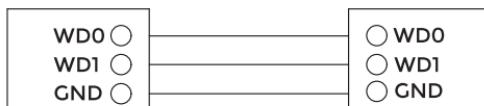


Card Reader Interface


IC/ID Card Reader or Management Device

Note: Door station can only be connected to one card reader or management device at a time.

INSTALLATION

MODEL: S212/S213M/S213K(Installation of Wiring Cover)

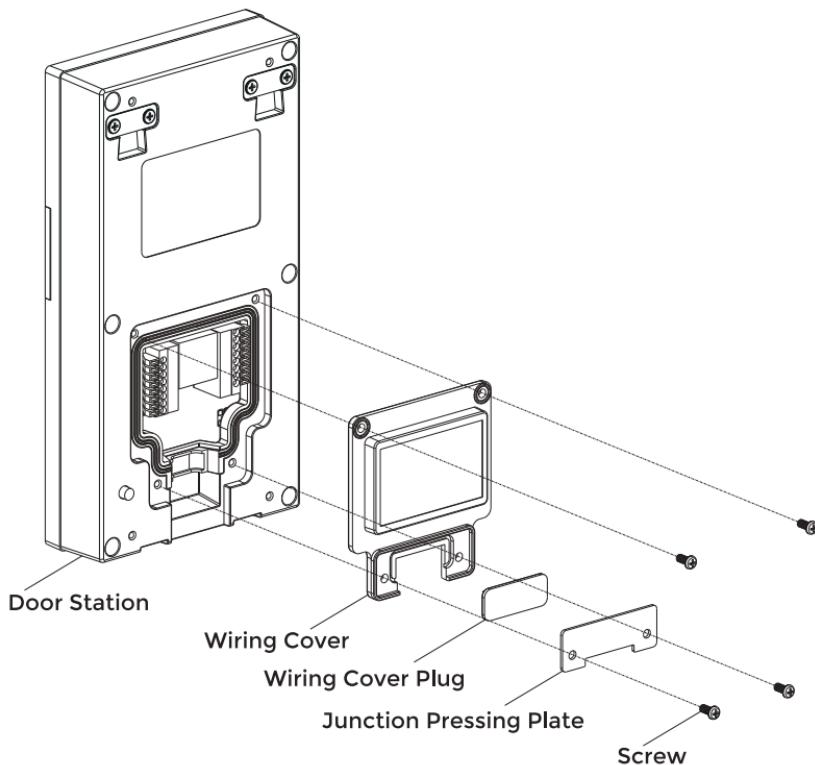


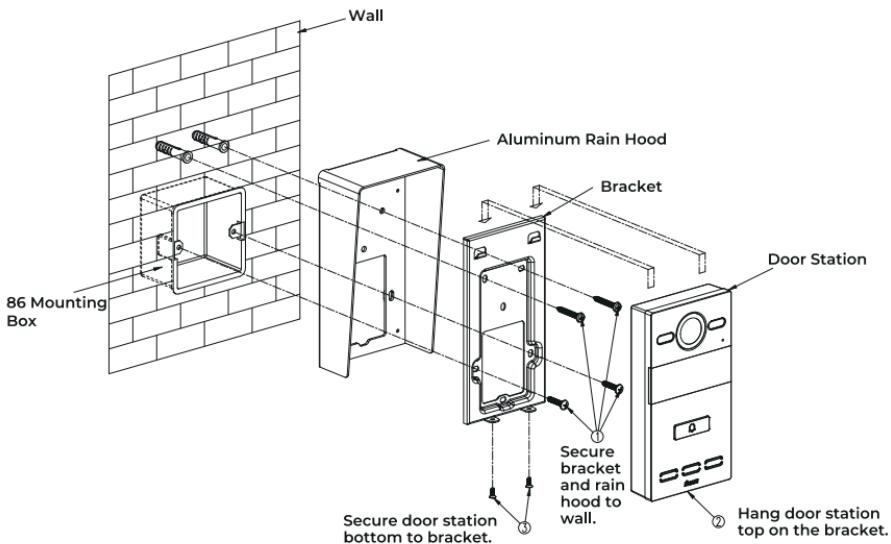


Product Dimension: 168 x 88 x 34 mm

Aluminum Rain Hood RH10: 173.5 x 94 x 53 mm

Installation Instructions:

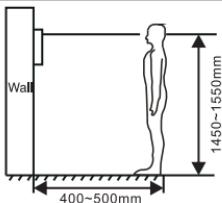


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

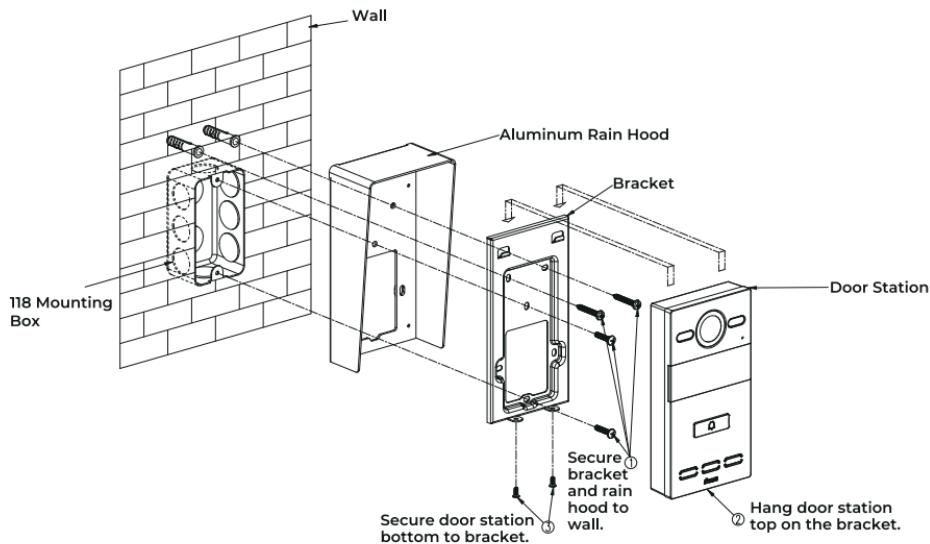


Product Dimension: 168 x 88 x 34 mm

Aluminum Rain Hood RH10: 173.5 x 94 x 53 mm

Installation Instructions:

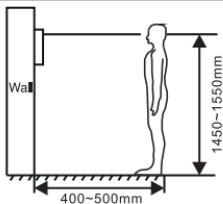


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

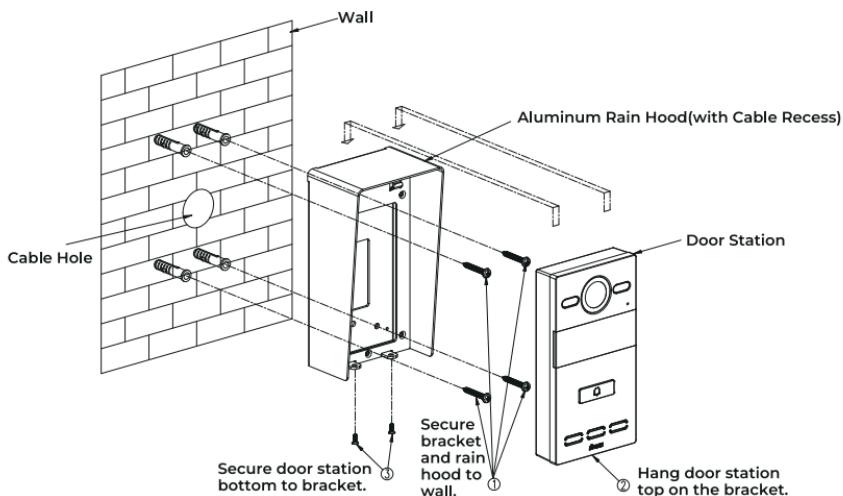


Product Dimension: 168 x 88 x 34 mm

Aluminum Rain Hood RH11: 174 x 94 x 66 mm

Installation Instructions:

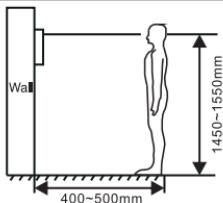


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

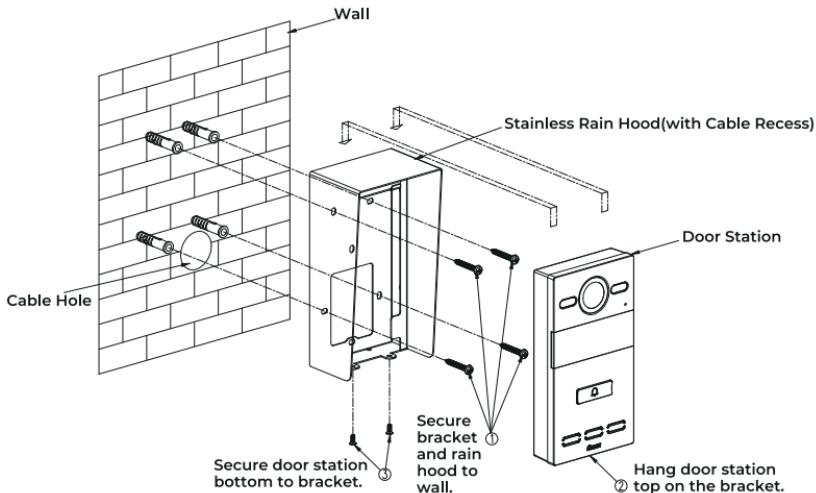


Product Dimension: 168 x 88 x 34 mm
Stainless Rain Hood RH12: 173 x 89 x 64.5 mm

Installation Instructions:

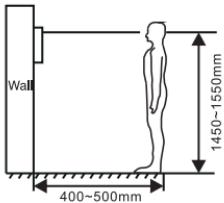


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

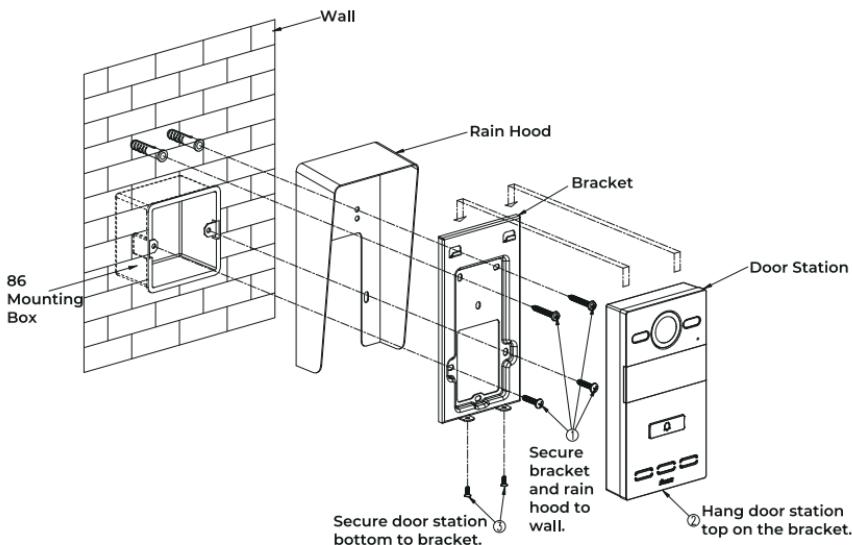


Product Dimension: 168 x 88 x 34 mm

Stainless Rain Hood RH01: 179 x 92.8 x 50.5 mm

Installation Instructions:

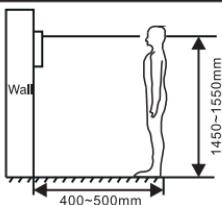


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

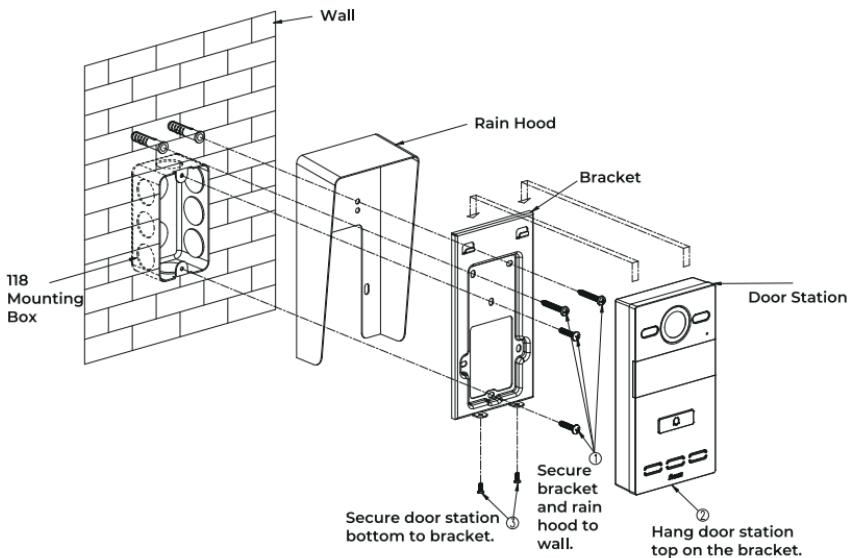

Product Dimension: 168 x 88 x 34 mm


Stainless Rain Hood RH01: 179 x 92.8 x 50.5 mm

Installation Instructions:

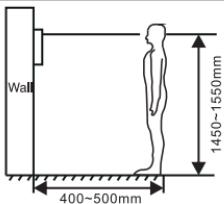

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

MODEL: S212(Flush Mounting)

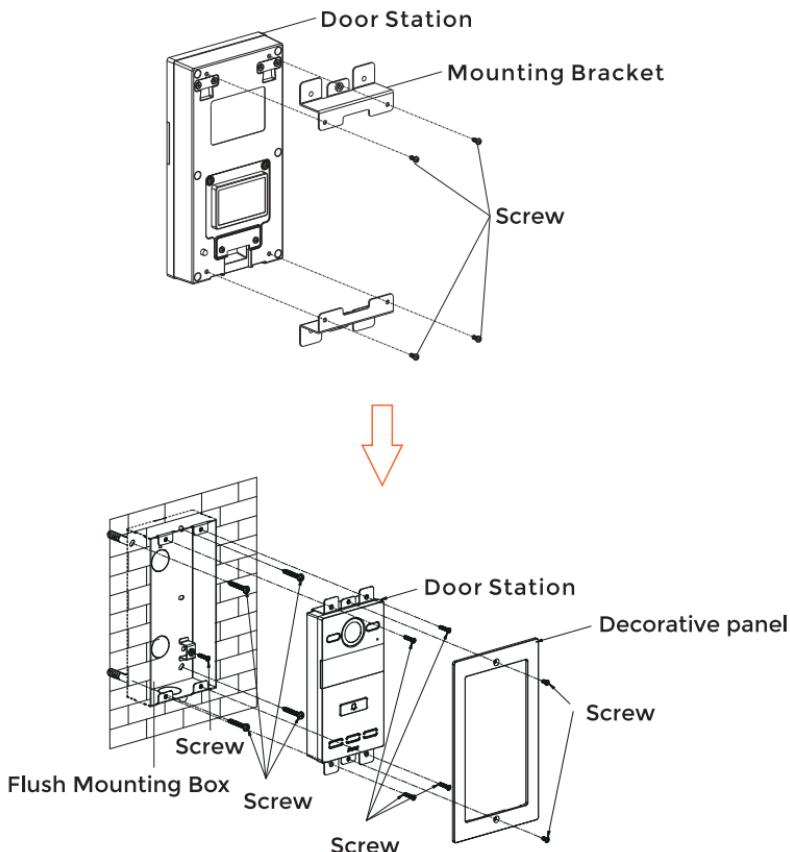


Product dimension: 88x168x32.5mm

Flush mounting product dimension: 120x210x48mm


Hole-cutting dimension: 98x199x42mm

Installation Instructions:

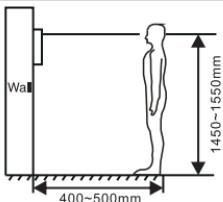

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.


MODEL: S213M / S213K (Surface Mounting-86 Mounting Box)
***Rain Hood RH08**

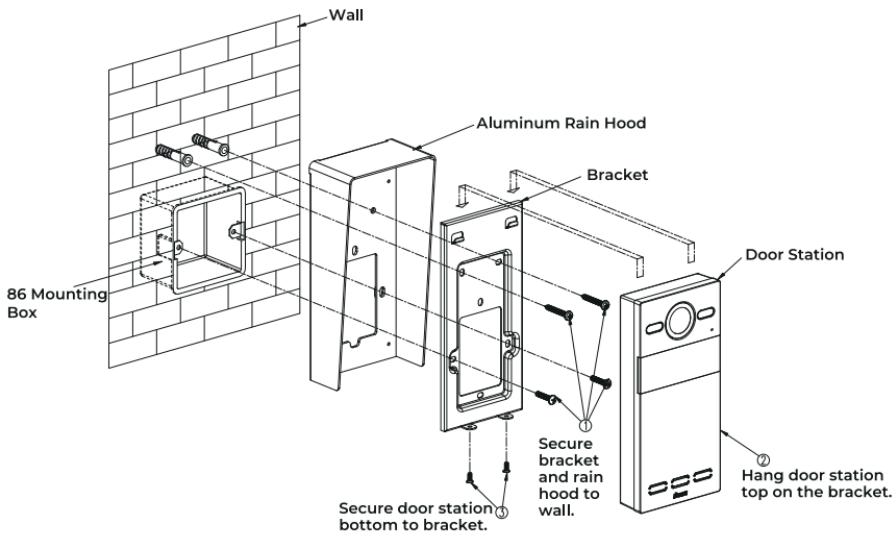

Product Dimension: 188 x 88 x 34 mm


Aluminum Rain Hood RH08: 193.5 x 94 x 53 mm

Installation Instructions:

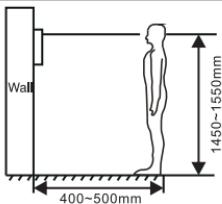

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.


MODEL: S213M / S213K (Surface Mounting-118 Mounting Box)
***Rain Hood RH08**

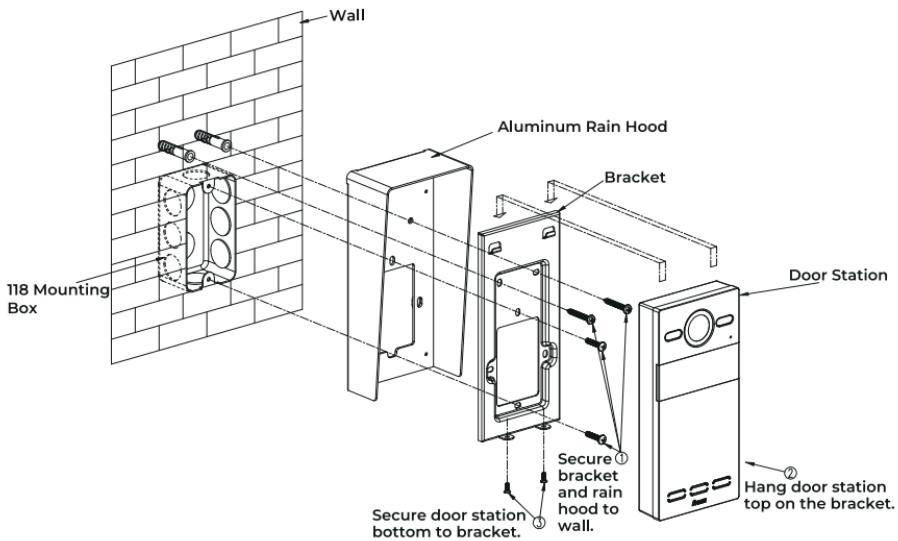

Product Dimension: 188 x 88 x 34 mm


Aluminum Rain Hood RH08: 193.5 x 94 x 53 mm

Installation Instructions:

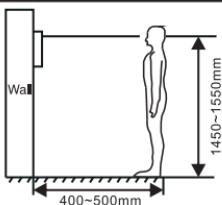

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.


MODEL: S213M / S213K (Surface Mounting) *Rain Hood RH09

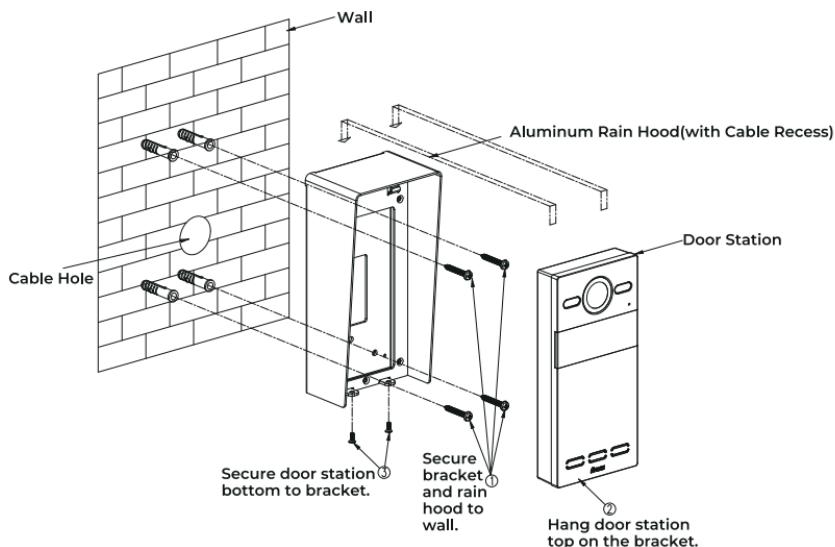


Product Dimension: 188 x 88 x 34 mm

Aluminum Rain Hood RH09: 194 x 94 x 66 mm

Installation Instructions:

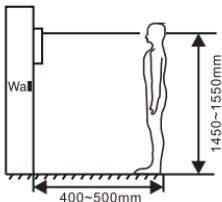


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

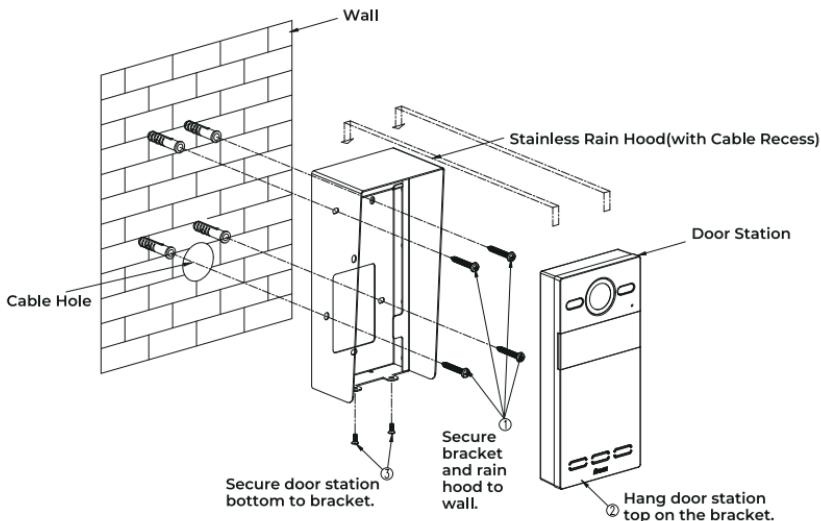


Product Dimension: 188 x 88 x 34 mm
Stainless Rain Hood RH13: 193 x 89 x 64.5 mm

Installation Instructions:

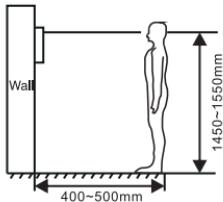


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

**MODEL: S213M / S213K(Surface Mounting-86 Mounting Box)
*Rain Hood RH01**

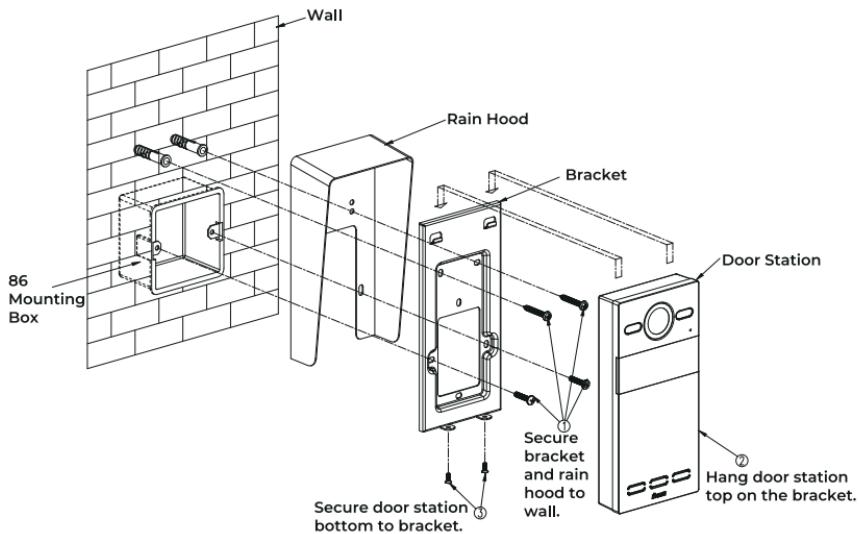


Product Dimension: 188 x 88 x 34 mm
Stainless Rain Hood RH01: 179 x 92.8 x 50.5 mm

Installation Instructions:

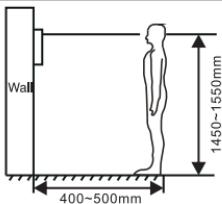


[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

MODEL: S213M / S213K(Surface Mounting-118 Mounting Box)
*Rain Hood RH01

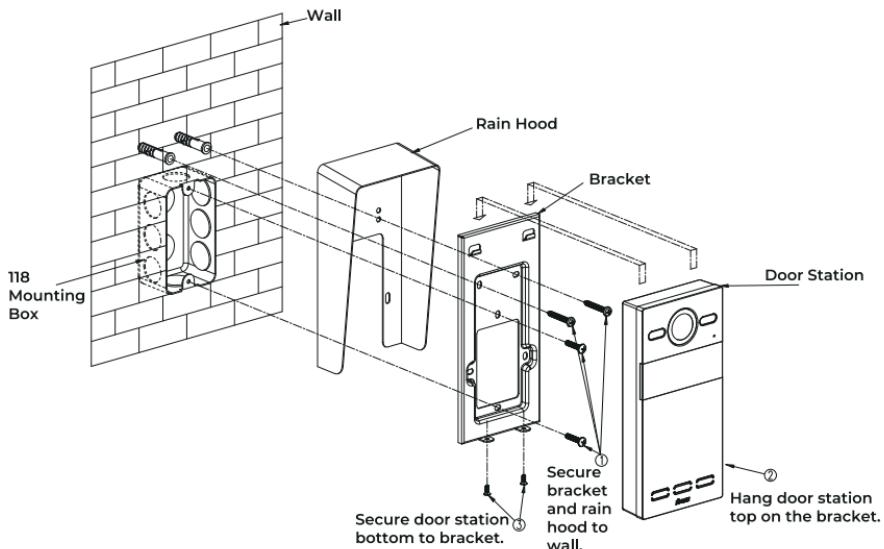


Product Dimension: 188 x 88 x 34 mm
Stainless Rain Hood RH01: 179 x 92.8 x 50.5 mm

Installation Instructions:

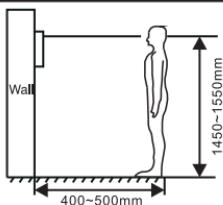

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

MODEL: S213M / S213K(Flush Mounting)

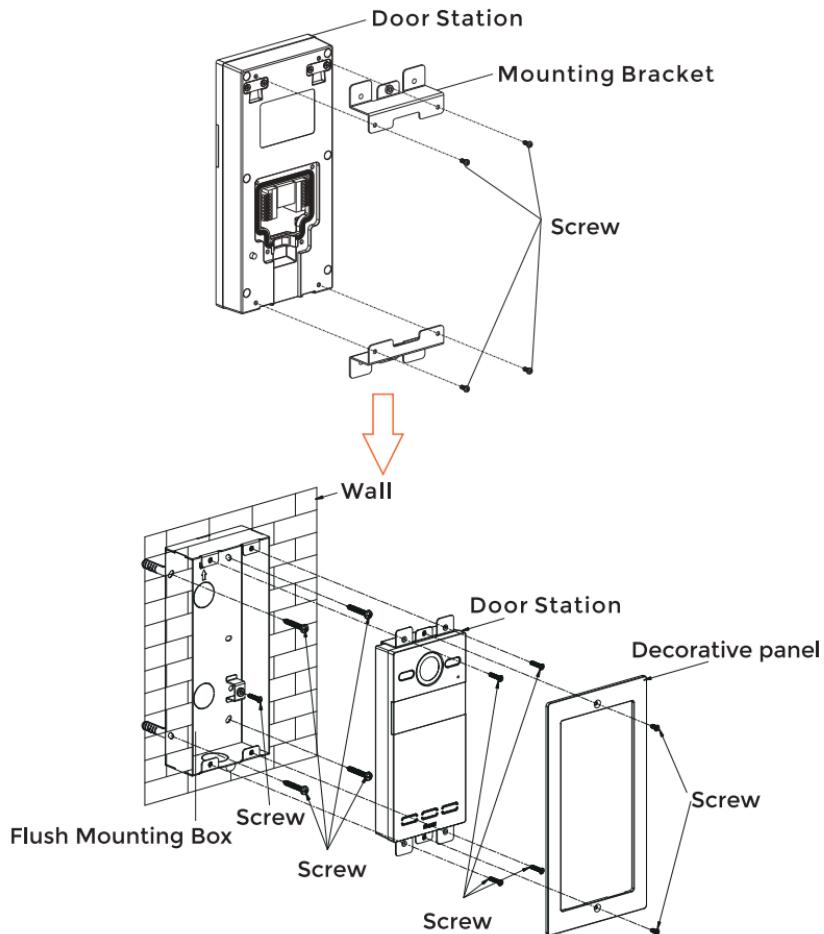


Product dimension: 88x188x32.5mm

Flush mounting product dimension: 120x230x48mm

Hole-cutting dimension: 98x219x42mm

Installation Instructions:

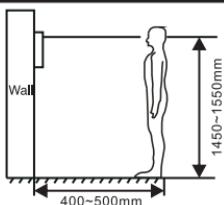

[Suggestion]: The camera should be 1450~1550mm above the ground. The camera at this height can capture human face perfectly.

SAFETY INSTRUCTIONS

In order to protect you and others from harm or your device from damage, please read the following information before using the device.

Do not install the device in the following places:

- Do not install the device in high-temperature and moist environment or the area close to magnetic field, such as the electric generator, transformer or magnet.
- Do not place the device near the heating products such as electric heater or the fluid container.
- Do not place the device in the sun or near the heat source, which might cause discoloration or deformation of the device.
- Do not install the device in an unstable position to avoid the property losses or personal injury caused by the falling of device.

Guard against electric shock, fire and explosion:

- Do not use damaged power cord, plug or loose outlet.
- Do not touch the power cord with wet hand or unplug the power cord by pulling.
- Do not bend or damage the power cord.
- Do not touch the device with wet hand.
- Do not make the power supply slip or cause the impact.
- Do not use the power supply without the manufacturer's approval.
- Do not have the liquids such as water go into the device.

Clean Device Surface

- Clean the device surfaces with soft cloth dipped in some water, and then rub the surface with dry cloth.

Other Tips

- In order to prevent damage to the paint layer or the case, please do not expose the device to chemical products, such as the diluent, gasoline, alcohol, insect-resist agents, opacifying agent and insecticide.
- Do not knock on the device with hard objects.
- Do not press the screen surface. Overexertion might cause flopover or damage to the device.
- Please be careful when standing up from the area under the device.
- Do not disassemble, repair or modify the device at your own discretion.
- The arbitrary modification is not covered under warranty. When any repair required, please contact the customer service center.
- If there is abnormal sound, smell or fume in the device, please unplug the power cord immediately and contact the customer service center.
- When the device isn't used for a long time, the adaptor and memory card can be removed and placed in dry environment.
- When moving, please hand over the manual to new tenant for proper usage of the device.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



EASY & SMART INTERCOM SOLUTIONS

Dnake